


Accumulator Plumbing


When adding accumulators to any kit: YOU WILL NEED ONE ACCUMULATOR FITTING KIT PER ACCUMULATOR! You must have the fitting kits to add the accumulators.

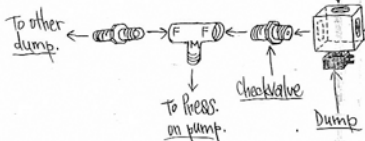

To Cylinder



Accumulator fitting comes with o-ring.

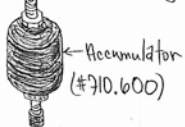

Accumulator fitting kit (#710.650)

- Ⓐ 1- 3/8" m to #6 STR / #630.306
- Ⓑ 1- 3/8" m f f tee / #630.333
- Ⓒ 1- Accumulator fitting w/ o-ring / #630.950

If you're just replacing the accumulators on a kit that already has them you will probably just need the accum. o-ring fitting (#630.950).

